



VERTEC VT4887A + VT4882 V4 PRESETS

Crown I-Tech (26 dB Gain)



NAME	PRESET	DESCRIPTION	CH 1	CH 2
MH/MH 4887A	1	VT4887A Mid-High Section (same for 4887A 4882 60, 80 3-Way presets and 4-Way presets)	4887A MID/HI	4887A MID/HI
	2	<i>empty (intentionally blank)</i>		
LF/MH 4887A 4882 60	3	VT4887A Low / Mid-High Sections (60 Hz Low section HPF, for use with SUB/SUB 4882 4887A 60)	4887A LOW	4887A MID/HI
MH/LF 4887A 4882 60	4	VT4887A Mid-High / Low Sections (60 Hz Low section HPF, for use with SUB/SUB 4882 4887A 60)	4887A MID/HI	4887A LOW
LF/LF 4887A 4882 60	5	VT4887A Low Section (60 Hz HPF, for use with SUB/SUB 4882 4887A 60)	4887A LOW	4887A LOW
SUB/SUB 4882 4887A 60	6	VT4882 Sub Processing (60 Hz LPF)	4882 SUB	4882 SUB
	7	<i>empty (intentionally blank)</i>		
LF/MH 4887A 4882 80	8	VT4887A Low / Mid-High Sections (80 Hz Low section HPF, for use with SUB/SUB 4882 4887A 80)	4887A LOW	4887A MID/HI
MH/LF 4887A 4882 80	9	VT4887A Mid-High / Low Sections (80 Hz Low section HPF, for use with SUB/SUB 4882 4887A 80)	4887A MID/HI	4887A LOW
LF/LF 4887A 4882 80	10	VT4887A Low Section (80 Hz HPF, for use with SUB/SUB 4882 4887A 80)	4887A LOW	4887A LOW
SUB/SUB 4882 4887A 80	11	VT4882 Sub Processing (80 Hz LPF)	4882 SUB	4882 SUB
	12	<i>empty (intentionally blank)</i>		
LF/MH 4887A 4W 81A 82	13	VT4887A Low / Mid-High Sections (80 Hz Low section HPF, for use with SUB/SUB 4881A 4W, 4882 4W)	4887A LOW	4887A MID/HI
MH/LF 4887A 4W 81A 82	14	VT4887A Mid-High / Low Sections (80 Hz Low section HPF, for use with SUB/SUB 4881A 4W, 4882 4W)	4887A MID/HI	4887A LOW
LF/LF 4887A 4W 81A 82	15	VT4887A Low Section (80 Hz HPF, for use with SUB/SUB 4881A 4W, 4882 4W)	4887A LOW	4887A LOW
SUB/SUB 4881A 4W 87A 82	16	VT4881A Sub Processing (80 Hz LPF), for use with 4887A 4W 87A 81A 82 and SUB/SUB 4882 4W	4881A SUB	4881A SUB
SUB/SUB 4882 4W 87A 81A	17	VT4882 Sub Processing (80 Hz LPF), for use with 4887A 4W 87A 81A 82 and SUB/SUB 4881A 4W	4882 SUB	4882 SUB