



VERTEC VT4887A + VT4880A V4 PRESETS

Crown I-Tech (26 dB Gain)



NAME	PRESET	DESCRIPTION	CH 1	CH 2
MH/MH 4887A	1	VT4887A Mid-High Section (same for 4887A 4880A 60, 80 3-Way presets and 4-Way presets)	4887A MID/HI	4887A MID/HI
	2	<i>empty (intentionally blank)</i>		
LF/MH 4887A 4880A 60	3	VT4887A Low / Mid-High Sections (60 Hz Low section HPF, for use with SUB/SUB 4880A 4887A 60)	4887A LOW	4887A MID/HI
MH/LF 4887A 4880A 60	4	VT4887A Mid-High / Low Sections (60 Hz Low section HPF, for use with SUB/SUB 4880A 4887A 60)	4887A MID/HI	4887A LOW
LF/LF 4887A 4880A 60	5	VT4887A Low Section (60 Hz HPF, for use with SUB/SUB 4880A 4887A 60)	4887A LOW	4887A LOW
SUB/SUB 4880A 4887A 60	6	VT4880A Sub Processing (60 Hz LPF)	4880A SUB	4880A SUB
	7	<i>empty (intentionally blank)</i>		
LF/MH 4887A 4880A 80	8	VT4887A Low / Mid-High Sections (80 Hz Low section HPF, for use with SUB/SUB 4880A 4887A 80)	4887A LOW	4887A MID/HI
MH/LF 4887A 4880A 80	9	VT4887A Mid-High / Low Sections (80 Hz Low section HPF, for use with SUB/SUB 4880A 4887A 80)	4887A MID/HI	4887A LOW
LF/LF 4887A 4880A 80	10	VT4887A Low Section (80 Hz HPF, for use with SUB/SUB 4880A 4887A 80)	4887A LOW	4887A LOW
SUB/SUB 4880A 4887A 80	11	VT4880A Sub Processing (80 Hz LPF)	4880A SUB	4880A SUB
	12	<i>empty (intentionally blank)</i>		
LF/MH 4887A 4W 81A 80A	13	VT4887A Low / Mid-High Sections (80 Hz Low section HPF, for use with SUB/SUB 4881A 4W, 4880A 4W)	4887A LOW	4887A MID/HI
MH/LF 4887A 4W 81A 80A	14	VT4887A Mid-High / Low Sections (80 Hz Low section HPF, for use with SUB/SUB 4881A 4W, 4880A 4W)	4887A MID/HI	4887A LOW
LF/LF 4887A 4W 81A 80A	15	VT4887A Low Section (80 Hz HPF, for use with SUB/SUB 4881A 4W, 4880A 4W)	4887A LOW	4887A LOW
SUB/SUB 4881A 4W 87A 80A	16	VT4881A Sub Processing (80 Hz LPF), for use with 4887A 4W 87A 81A 80 and SUB/SUB 4880A 4W	4881A SUB	4881A SUB
SUB/SUB 4880A 4W 87A 81A	17	VT4880A Sub Processing (80 Hz LPF), for use with 4887A 4W 87A 81A 80 and SUB/SUB 4881A 4W	4880A SUB	4880A SUB