



# VERTEC DRIVEPACK V4 PRESETS

## VT4882DP-DA



FACTORY MEMORY	PRESET	DESCRIPTION
VT4882DP-DA 4888 X	1	VT4882DP (80 Hz LPF, NEGATIVE POLARITY) for use with VT4888 or VT4888DP (X preset)
VT4882DP-DA 4888 60	2	VT4882DP (60 Hz LPF) for use with VT4888 or VT4888DP (60 preset)
VT4882DP-DA 4888 80	3	VT4882DP (80 Hz LPF) for use with VT4888 or VT4888DP (80 preset)

FACTORY MEMORY	PRESET	DESCRIPTION
VT4882DP-DA 4889 X	4	VT4882DP (80 Hz LPF, NEGATIVE POLARITY) for use with VT4889, VT4889-1 or VT4889ADP (X preset)
VT4882DP-DA 4889 60	5	VT4882DP (60 Hz LPF) for use with VT4889, VT4889-1 or VT4889ADP (60 preset)
VT4882DP-DA 4889 80	6	VT4882DP (80 Hz LPF) for use with VT4889, VT4889-1 or VT4889ADP (80 preset)

FACTORY MEMORY	PRESET	DESCRIPTION
VT4882DP-DA 4887A 60	7	VT4882DP (60 Hz LPF) for use with VT4887A or VT4887ADP (60 preset)
VT4882DP-DA 4887A 80	8	VT4882DP (80 Hz LPF) for use with VT4887A or VT4887ADP (80 preset)

FACTORY MEMORY	PRESET	DESCRIPTION
VT4882DP-DA 120	9	VT4882DP 120 Hz LPF (for use with outboard DSP)

USER MEMORY	PRESET	DESCRIPTION
USER (VT4882DP-DA 4888 80)	10	USER MEMORY (loaded with: VT4882DP-DA 4888 80)

**NOTE: REAR PANEL BUTTON SUB FILTER OFF / ON OPERATION TOGGLES BETWEEN PRESET 9 (OFF) AND PRESET 3 (ON)**