



VERTEC VT4888 V4 PRESETS

XTA DP226

		INPUT A		INPUT B				
3-WAY STEREO		PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6
4888 3WX		10	4888 LOW	4888 MID	4888 HI	4888 LOW	4888 MID	4888 HI
4-WAY + AUX + AUX SUB		PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6
4888 4881A X		11	4881A	4888 LOW	4888 MID	4888 HI	AUX (FULLRANGE)	4881A
4888 4881A 60		12	4881A	4888 LOW	4888 MID	4888 HI	AUX (FULLRANGE)	4881A
4888 4881A 80		13	4881A	4888 LOW	4888 MID	4888 HI	AUX (FULLRANGE)	4881A
4888 4882 X		14	4882	4888 LOW	4888 MID	4888 HI	AUX (FULLRANGE)	4882
4888 4882 60		15	4882	4888 LOW	4888 MID	4888 HI	AUX (FULLRANGE)	4882
4888 4882 80		16	4882	4888 LOW	4888 MID	4888 HI	AUX (FULLRANGE)	4882
4888 4880 X		17	4880	4888 LOW	4888 MID	4888 HI	AUX (FULLRANGE)	4880
4888 4880 60		18	4880	4888 LOW	4888 MID	4888 HI	AUX (FULLRANGE)	4880
4888 4880 80		19	4880	4888 LOW	4888 MID	4888 HI	AUX (FULLRANGE)	4880
4888 4880A X		20	4880A	4888 LOW	4888 MID	4888 HI	AUX (FULLRANGE)	4880A
4888 4880A 60		21	4880A	4888 LOW	4888 MID	4888 HI	AUX (FULLRANGE)	4880A
4888 4880A 80		22	4880A	4888 LOW	4888 MID	4888 HI	AUX (FULLRANGE)	4880A
4-WAY + 4887A OFFSTAGE FILL (2WX)		PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6
88 / 82 X + 87A 2WX		23	4882	4888 LOW	4888 MID	4888 HI	4887A LOW 2WX	4887A MID/HI 2WX
88 / 82 60 + 87A 2WX		24	4882	4888 LOW	4888 MID	4888 HI	4887A LOW 2WX	4887A MID/HI 2WX
88 / 82 80 + 87A 2WX		25	4882	4888 LOW	4888 MID	4888 HI	4887A LOW 2WX	4887A MID/HI 2WX
88 / 80 X + 87A 2WX		26	4880	4888 LOW	4888 MID	4888 HI	4887A LOW 2WX	4887A MID/HI 2WX
88 / 80 60 + 87A 2WX		27	4880	4888 LOW	4888 MID	4888 HI	4887A LOW 2WX	4887A MID/HI 2WX
88 / 80 80 + 87A 2WX		28	4880	4888 LOW	4888 MID	4888 HI	4887A LOW 2WX	4887A MID/HI 2WX
88 / 80A X + 87A 2WX		29	4880A	4888 LOW	4888 MID	4888 HI	4887A LOW 2WX	4887A MID/HI 2WX
88 / 80A 60 + 87A 2WX		30	4880A	4888 LOW	4888 MID	4888 HI	4887A LOW 2WX	4887A MID/HI 2WX
88 / 80A 80 + 87A 2WX		31	4880A	4888 LOW	4888 MID	4888 HI	4887A LOW 2WX	4887A MID/HI 2WX
4-WAY + 4887A DISTRIBUTED FILL (2W)		PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6
88 / 82 X + 87A 2W		32	4882	4888 LOW	4888 MID	4888 HI	4887A LOW 2W	4887A MID/HI 2W
88 / 82 60 + 87A 2W		33	4882	4888 LOW	4888 MID	4888 HI	4887A LOW 2W	4887A MID/HI 2W
88 / 82 80 + 87A 2W		34	4882	4888 LOW	4888 MID	4888 HI	4887A LOW 2W	4887A MID/HI 2W
88 / 80 X + 87A 2W		35	4880	4888 LOW	4888 MID	4888 HI	4887A LOW 2W	4887A MID/HI 2W
88 / 80 60 + 87A 2W		36	4880	4888 LOW	4888 MID	4888 HI	4887A LOW 2W	4887A MID/HI 2W
88 / 80 80 + 87A 2W		37	4880	4888 LOW	4888 MID	4888 HI	4887A LOW 2W	4887A MID/HI 2W
88 / 80A X + 87A 2W		38	4880A	4888 LOW	4888 MID	4888 HI	4887A LOW 2W	4887A MID/HI 2W
88 / 80A 60 + 87A 2W		39	4880A	4888 LOW	4888 MID	4888 HI	4887A LOW 2W	4887A MID/HI 2W
88 / 80A 80 + 87A 2W		40	4880A	4888 LOW	4888 MID	4888 HI	4887A LOW 2W	4887A MID/HI 2W
5-WAY + AUX SUB		PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6
4888 / 82 + 4880 X		41	4880	4882	4888 LOW	4888 MID	4888 HI	4880
4888 / 82 + 4880 60		42	4880	4882	4888 LOW	4888 MID	4888 HI	4880
4888 / 82 + 4880A X		43	4880A	4882	4888 LOW	4888 MID	4888 HI	4880A
4888 / 82 + 4880A 60		44	4880A	4882	4888 LOW	4888 MID	4888 HI	4880A
NOTES:								
Preset 10		Stereo 3-Way Preset (extended LF Response - low section HPF unlocked)						
Presets 11-22		4-Way Presets for Ground Stacked 4881A, 4882, 4880 or 4880A + Flown 4888 + Aux Output 5 + Optional Aux Sub Drive						
Presets 23-31		4-Way Presets for Ground Stacked 4882, 4880 or 4880A + Flown 4888 + Center Cluster / Offstage Fill (4887A in 2WX mode)						
Presets 32-40		4-Way Presets for Ground Stacked 4882, 4880 or 4880A + Flown 4888 + Distributed Fill (4887A in 2W mode)						
Presets 41-44		5-Way Presets for Ground Stacked 4880 or 4880A + Flown 4888 / 4882 + Optional Aux Sub Drive						