



**CINEMA SERIES | 3153**

**CINEMA SERIES | 4253**

**ASSEMBLY INSTRUCTION GUIDE**

## 3132 M/HF Assembly Instructions for 3153 and 4253

1. Position the base mounting plate on the LF Cabinet and align the screw holes as shown in Figure 1.
2. Fasten the base plate onto the LF cabinet using the nine supplied M5 x 15mm screws with a Philips head screw driver.
3. Align the pivot point screw holes found on the bottom of the 3132-M/HF to the front holes on the base plate as shown in Figure 2.
4. Secure the 3132-M/HF to the base plate using two of the supplied M5 x 10mm screws with a Philips head screw driver.

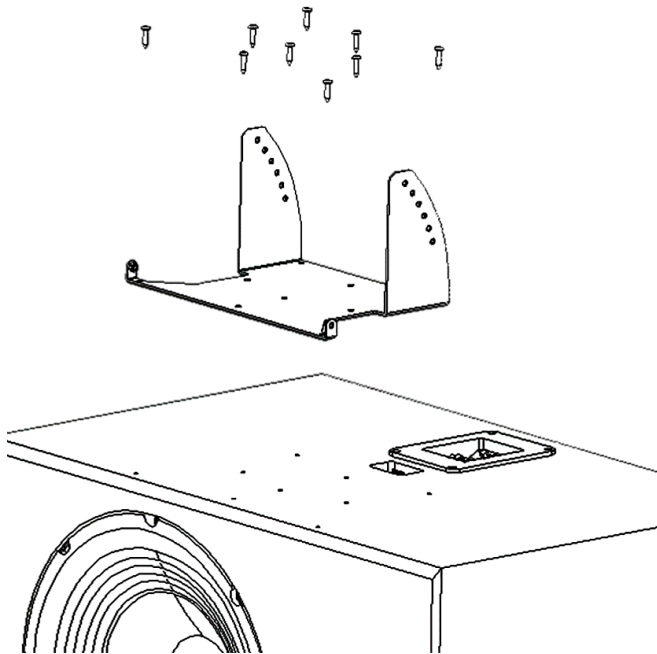


Figure 1

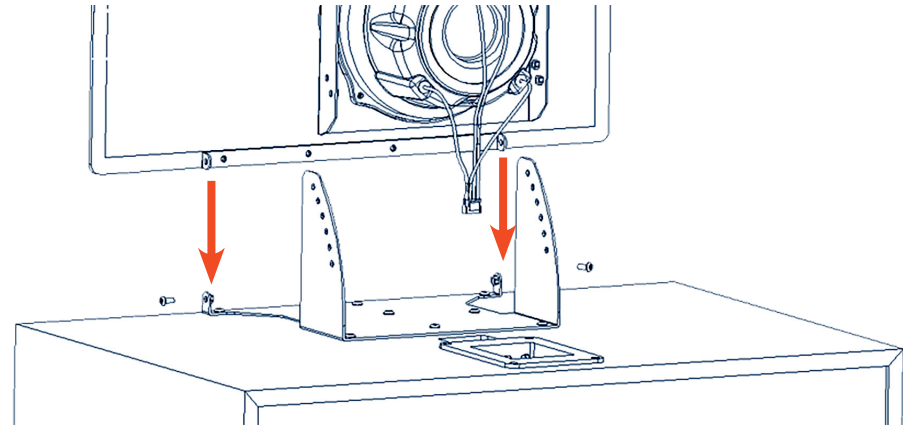


Figure 2

1. Tilt the 3132-M/HF Horn to the desired vertical angle for installation and secure in place using the other two M5 x 10mm screws with a Philips head screw driver as shown in Figure 3.
2. Align the 4-pin female connector of the 3132-M/HF Horn into the male connector on the LF Cabinet paying close attention to the keying on the connectors and click in place as shown in Figure 4.

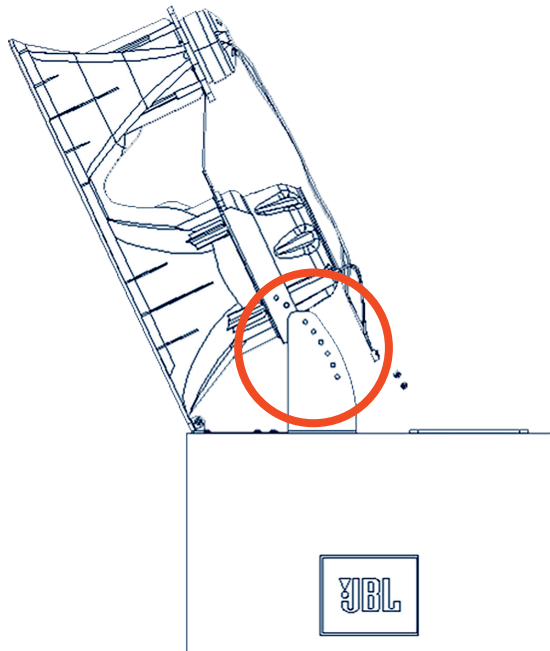


Figure 3

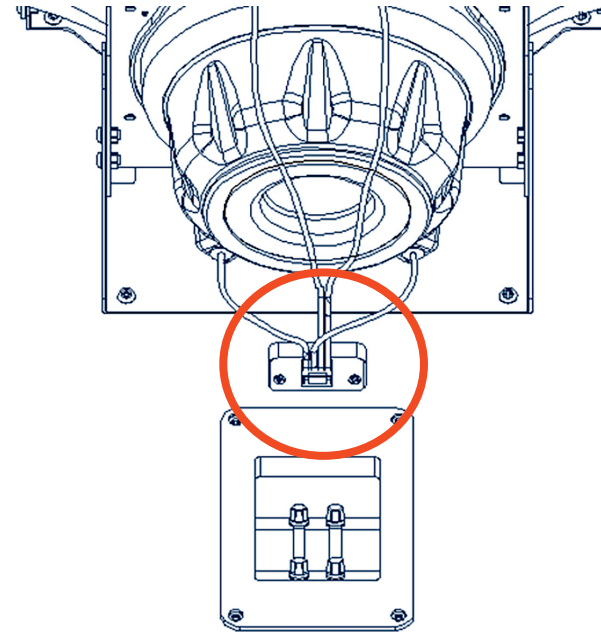


Figure 4