



# VERTEC VT4889 / VT4887A V4 PRESETS BSS FDS-366 Omnidrive Compact Plus

		INPUT A	INPUT B	INPUT C			
3-WAY STEREO	PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6
USER	1	AUX (FULLRANGE)	AUX (FULLRANGE)	AUX (FULLRANGE)	AUX (FULLRANGE)	AUX (FULLRANGE)	AUX (FULLRANGE)
4889 3WX	2	4889 LOW	4889 MID	4889 HI	4889 LOW	4889 MID	4889 HI
4-WAY + AUX	PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6
89 81A X	3	4881A	4889 LOW	4889 MID	4889 HI	AUX (FULLRANGE)	AUX (FULLRANGE)
89 81A 60	4	4881A	4889 LOW	4889 MID	4889 HI	AUX (FULLRANGE)	AUX (FULLRANGE)
89 81A 80	5	4881A	4889 LOW	4889 MID	4889 HI	AUX (FULLRANGE)	AUX (FULLRANGE)
89 82 X	6	4882	4889 LOW	4889 MID	4889 HI	AUX (FULLRANGE)	AUX (FULLRANGE)
89 82 60	7	4882	4889 LOW	4889 MID	4889 HI	AUX (FULLRANGE)	AUX (FULLRANGE)
89 82 80	8	4882	4889 LOW	4889 MID	4889 HI	AUX (FULLRANGE)	AUX (FULLRANGE)
89 80 X	9	4880	4889 LOW	4889 MID	4889 HI	AUX (FULLRANGE)	AUX (FULLRANGE)
89 80 60	10	4880	4889 LOW	4889 MID	4889 HI	AUX (FULLRANGE)	AUX (FULLRANGE)
89 80 80	11	4880	4889 LOW	4889 MID	4889 HI	AUX (FULLRANGE)	AUX (FULLRANGE)
89 80A X	12	4880A	4889 LOW	4889 MID	4889 HI	AUX (FULLRANGE)	AUX (FULLRANGE)
89 80A 60	13	4880A	4889 LOW	4889 MID	4889 HI	AUX (FULLRANGE)	AUX (FULLRANGE)
89 80A 80	14	4880A	4889 LOW	4889 MID	4889 HI	AUX (FULLRANGE)	AUX (FULLRANGE)
4-WAY + 4887A OFFSTAGE FILL (2WX)	PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6
89 80 X 2X	15	4880	4889 LOW	4889 MID	4889 HI	4887A LOW 2WX	4887A MID/HI 2WX
89 80 60 2X	16	4880	4889 LOW	4889 MID	4889 HI	4887A LOW 2WX	4887A MID/HI 2WX
89 80 80 2X	17	4880	4889 LOW	4889 MID	4889 HI	4887A LOW 2WX	4887A MID/HI 2WX
89 80A X 2X	18	4880A	4889 LOW	4889 MID	4889 HI	4887A LOW 2WX	4887A MID/HI 2WX
89 8A 60 2X	19	4880A	4889 LOW	4889 MID	4889 HI	4887A LOW 2WX	4887A MID/HI 2WX
89 8A 80 2X	20	4880A	4889 LOW	4889 MID	4889 HI	4887A LOW 2WX	4887A MID/HI 2WX
4-WAY + 4887A DISTRIBUTED FILL (2W)	PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6
89 80 X 2W	21	4880	4889 LOW	4889 MID	4889 HI	4887A LOW 2W	4887A MID/HI 2W
89 80 60 2W	22	4880	4889 LOW	4889 MID	4889 HI	4887A LOW 2W	4887A MID/HI 2W
89 80 80 2W	23	4880	4889 LOW	4889 MID	4889 HI	4887A LOW 2W	4887A MID/HI 2W
89 80A X 2W	24	4880A	4889 LOW	4889 MID	4889 HI	4887A LOW 2W	4887A MID/HI 2W
89 8A 60 2W	25	4880A	4889 LOW	4889 MID	4889 HI	4887A LOW 2W	4887A MID/HI 2W
89 8A 80 2W	26	4880A	4889 LOW	4889 MID	4889 HI	4887A LOW 2W	4887A MID/HI 2W
4-WAY + 4887A DOWNFILL (DF)	PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6
89 80 X DF	27	4880	4889 LOW	4889 MID	4889 HI	4887A LOW DF	4887A MID/HI DF
89 80 60 DF	28	4880	4889 LOW	4889 MID	4889 HI	4887A LOW DF	4887A MID/HI DF
89 80 80 ADF	29	4880	4889 LOW	4889 MID	4889 HI	4887A LOW DF	4887A MID/HI DF
89 80A X DF	30	4880A	4889 LOW	4889 MID	4889 HI	4887A LOW DF	4887A MID/HI DF
89 8A 60 DF	31	4880A	4889 LOW	4889 MID	4889 HI	4887A LOW DF	4887A MID/HI DF
89 8A 80 DF	32	4880A	4889 LOW	4889 MID	4889 HI	4887A LOW DF	4887A MID/HI DF
5-WAY + AUX	PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6
89 5W 80 X	33	4880	4880	4889 LOW	4889 MID	4889 HI	AUX (FULLRANGE)
89 5W 80 60	34	4880	4880	4889 LOW	4889 MID	4889 HI	AUX (FULLRANGE)
89 5W 80 80	35	4880	4880	4889 LOW	4889 MID	4889 HI	AUX (FULLRANGE)
89 5W 80A X	36	4880A	4880A	4889 LOW	4889 MID	4889 HI	AUX (FULLRANGE)
89 5W 8A 60	37	4880A	4880A	4889 LOW	4889 MID	4889 HI	AUX (FULLRANGE)
89 5W 8A 80	38	4880A	4880A	4889 LOW	4889 MID	4889 HI	AUX (FULLRANGE)
NOTES:							
Preset 2	Stereo 3-Way Preset (extended LF Response - low section HPF unlocked)						
* Presets 3-14	4+2 Presets for 4881A, 4882, 4880 or 4880A + VT4889 + Aux Outputs 5/6						
* Presets 15-20	4+2 Presets for 4880 or 4880A + VT4889 + Center Cluster / Offstage Fill (4887A in 2WX mode)						
* Presets 21-26	4+2 Presets for 4880 or 4880A + VT4889 + Distributed Fill (4887A in 2W mode)						
* Presets 27-32	4+2 Presets for 4880 or 4880A + VT4889 / 4887A Downfill (4887A in DF mode)						
* Presets 33-38	5-Way + Aux Preset for Ground Stacked 4880 or 4880A Subwoofers + Flown 4880 or 4880A Subwoofers + VT4889 + AUX						

\* FOR AUX SUB DRIVE USE UTILS / SOURCE TO SELECT DESIRED INPUT