



VERTEC VT4887A V4 PRESETS

XTA DP448

						INPUT A	INPUT B	INPUT C	INPUT D	
4 x 2-WAY		PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6	OUT 7	OUT 8
4887A 4 x 2WX		257	4887A LOW 2WX	4887A MID/HI 2WX	4887A LOW 2WX	4887A MID/HI 2WX	4887A LOW 2WX	4887A MID/HI 2WX	4887A LOW 2WX	4887A MID/HI 2WX
4887A 4 x 2W		258	4887A LOW 2W	4887A MID/HI 2W	4887A LOW 2W	4887A MID/HI 2W	4887A LOW 2W	4887A MID/HI 2W	4887A LOW 2W	4887A MID/HI 2W
3-WAY STEREO + AUX		PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6	OUT 7	OUT 8
4887A 4881A 60 + AUX		259	AUX (FULLRANGE)	4881A	4887A LOW	4887A MID/HI	AUX (FULLRANGE)	4881A	4887A LOW	4887A MID/HI
4887A 4881A 80 + AUX		260	AUX (FULLRANGE)	4881A	4887A LOW	4887A MID/HI	AUX (FULLRANGE)	4881A	4887A LOW	4887A MID/HI
4887A 4881A 100 + AUX		261	AUX (FULLRANGE)	4881A	4887A LOW	4887A MID/HI	AUX (FULLRANGE)	4881A	4887A LOW	4887A MID/HI
4887A 4882 60 + AUX		262	AUX (FULLRANGE)	4882	4887A LOW	4887A MID/HI	AUX (FULLRANGE)	4882	4887A LOW	4887A MID/HI
4887A 4882 80 + AUX		263	AUX (FULLRANGE)	4882	4887A LOW	4887A MID/HI	AUX (FULLRANGE)	4882	4887A LOW	4887A MID/HI
4887A 4880 60 + AUX		264	AUX (FULLRANGE)	4880	4887A LOW	4887A MID/HI	AUX (FULLRANGE)	4880	4887A LOW	4887A MID/HI
4887A 4880 80 + AUX		265	AUX (FULLRANGE)	4880	4887A LOW	4887A MID/HI	AUX (FULLRANGE)	4880	4887A LOW	4887A MID/HI
4887A 4880A 60 + AUX		266	AUX (FULLRANGE)	4880A	4887A LOW	4887A MID/HI	AUX (FULLRANGE)	4880A	4887A LOW	4887A MID/HI
4887A 4880A 80 + AUX		267	AUX (FULLRANGE)	4880A	4887A LOW	4887A MID/HI	AUX (FULLRANGE)	4880A	4887A LOW	4887A MID/HI
3-WAY STEREO / AUX SUB		PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6	OUT 7	OUT 8
4887A 4881A 60		268	4881A	4881A	4887A LOW	4887A MID/HI	4881A	4881A	4887A LOW	4887A MID/HI
4887A 4881A 80		269	4881A	4881A	4887A LOW	4887A MID/HI	4881A	4881A	4887A LOW	4887A MID/HI
4887A 4881A 100		270	4881A	4881A	4887A LOW	4887A MID/HI	4881A	4881A	4887A LOW	4887A MID/HI
4887A 4882 60		271	4882	4882	4887A LOW	4887A MID/HI	4882	4882	4887A LOW	4887A MID/HI
4887A 4882 80		272	4882	4882	4887A LOW	4887A MID/HI	4882	4882	4887A LOW	4887A MID/HI
4887A 4880 60		273	4880	4880	4887A LOW	4887A MID/HI	4880	4880	4887A LOW	4887A MID/HI
4887A 4880 80		274	4880	4880	4887A LOW	4887A MID/HI	4880	4880	4887A LOW	4887A MID/HI
4887A 4880A 60		275	4880A	4880A	4887A LOW	4887A MID/HI	4880A	4880A	4887A LOW	4887A MID/HI
4887A 4880A 80		276	4880A	4880A	4887A LOW	4887A MID/HI	4880A	4880A	4887A LOW	4887A MID/HI
3-WAY STEREO + 2-WAY		PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6	OUT 7	OUT 8
87A 81A 60 + 2WX		277	4881A	4887A LOW	4887A MID/HI	4881A	4887A LOW	4887A MID/HI	4887A LOW 2WX	4887A MID/HI 2WX
87A 81A 80 + 2WX		278	4881A	4887A LOW	4887A MID/HI	4881A	4887A LOW	4887A MID/HI	4887A LOW 2WX	4887A MID/HI 2WX
87A 81A 100 + 2WX		279	4881A	4887A LOW	4887A MID/HI	4881A	4887A LOW	4887A MID/HI	4887A LOW 2WX	4887A MID/HI 2WX
87A 82 60 + 2WX		280	4882	4887A LOW	4887A MID/HI	4882	4887A LOW	4887A MID/HI	4887A LOW 2WX	4887A MID/HI 2WX
87A 82 80 + 2WX		281	4882	4887A LOW	4887A MID/HI	4882	4887A LOW	4887A MID/HI	4887A LOW 2WX	4887A MID/HI 2WX
87A 80 60 + 2WX		282	4880	4887A LOW	4887A MID/HI	4880	4887A LOW	4887A MID/HI	4887A LOW 2WX	4887A MID/HI 2WX
87A 80 80 + 2WX		283	4880	4887A LOW	4887A MID/HI	4880	4887A LOW	4887A MID/HI	4887A LOW 2WX	4887A MID/HI 2WX
87A 80A 60 + 2WX		284	4880A	4887A LOW	4887A MID/HI	4880A	4887A LOW	4887A MID/HI	4887A LOW 2WX	4887A MID/HI 2WX
87A 80A 80 + 2WX		285	4880A	4887A LOW	4887A MID/HI	4880A	4887A LOW	4887A MID/HI	4887A LOW 2WX	4887A MID/HI 2WX
87A 81A 60 + 2W		286	4881A	4887A LOW	4887A MID/HI	4881A	4887A LOW	4887A MID/HI	4887A LOW 2W	4887A MID/HI 2W
87A 81A 80 + 2W		287	4881A	4887A LOW	4887A MID/HI	4881A	4887A LOW	4887A MID/HI	4887A LOW 2W	4887A MID/HI 2W
87A 81A 100 + 2W		288	4881A	4887A LOW	4887A MID/HI	4881A	4887A LOW	4887A MID/HI	4887A LOW 2W	4887A MID/HI 2W
87A 82 60 + 2W		289	4882	4887A LOW	4887A MID/HI	4882	4887A LOW	4887A MID/HI	4887A LOW 2W	4887A MID/HI 2W
87A 82 80 + 2W		290	4882	4887A LOW	4887A MID/HI	4882	4887A LOW	4887A MID/HI	4887A LOW 2W	4887A MID/HI 2W
87A 80 60 + 2W		291	4880	4887A LOW	4887A MID/HI	4880	4887A LOW	4887A MID/HI	4887A LOW 2W	4887A MID/HI 2W
87A 80 80 + 2W		292	4880	4887A LOW	4887A MID/HI	4880	4887A LOW	4887A MID/HI	4887A LOW 2W	4887A MID/HI 2W
87A 80A 60 + 2W		293	4880A	4887A LOW	4887A MID/HI	4880A	4887A LOW	4887A MID/HI	4887A LOW 2W	4887A MID/HI 2W
87A 80A 80 + 2W		294	4880A	4887A LOW	4887A MID/HI	4880A	4887A LOW	4887A MID/HI	4887A LOW 2W	4887A MID/HI 2W
4-WAY STEREO		PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6	OUT 7	OUT 8
4887A / 4881A + 4882		295	4882	4881A	4887A LOW	4887A MID/HI	4882	4881A	4887A LOW	4887A MID/HI
4887A / 4881A + 4880		296	4880	4881A	4887A LOW	4887A MID/HI	4880	4881A	4887A LOW	4887A MID/HI
4887A / 4881A + 4880A		297	4880A	4881A	4887A LOW	4887A MID/HI	4880A	4881A	4887A LOW	4887A MID/HI

NOTES:

Presets 257	4887A 2WX preset (extended LF/HF response for medium/long throw applications)
Presets 258	4887A Single Enclosure, nominal flat for distributed, short throw / proximity fill applications
Presets 259-267	Stereo 3-Way with AUX / FULLRANGE Outputs
Presets 268-276	Stereo 3-Way with Optional Aux Sub Drive (Outputs 2/6 via FOH L/R or Outputs 1/5 via Sub L/R)
Presets 277-285	Stereo 3-Way + Center Cluster or Offstage Fill (outputs 7/8 = 4887A 2WX preset)
Presets 286-294	Stereo 3-Way + Distributed Fill (outputs 7/8 = 4887A 2W preset)
Presets 295-297	Stereo 4-Way: Ground Stacked 4882, 4880 or 4880A; Flown 4887A / 4881A