



VERTEC VT4888 V4 PRESETS XTA DP448

INPUT A	INPUT B	INPUT C	INPUT D
---------	---------	---------	---------

3-WAY STEREO + AUX	PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6	OUT 7	OUT 8
4888 3WX	257	AUX (FULLRANGE)	4888 LOW	4888 MID	4888 HI	AUX (FULLRANGE)	4888 LOW	4888 MID	4888 HI

4-WAY STEREO	PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6	OUT 7	OUT 8
4888 4881A X	258	4881A	4888 LOW	4888 MID	4888 HI	4881A	4888 LOW	4888 MID	4888 HI
4888 4881A 60	259	4881A	4888 LOW	4888 MID	4888 HI	4881A	4888 LOW	4888 MID	4888 HI
4888 4881A 80	260	4881A	4888 LOW	4888 MID	4888 HI	4881A	4888 LOW	4888 MID	4888 HI
4888 4882 X	261	4882	4888 LOW	4888 MID	4888 HI	4882	4888 LOW	4888 MID	4888 HI
4888 4882 60	262	4882	4888 LOW	4888 MID	4888 HI	4882	4888 LOW	4888 MID	4888 HI
4888 4882 80	263	4882	4888 LOW	4888 MID	4888 HI	4882	4888 LOW	4888 MID	4888 HI
4888 4880 X	264	4880	4888 LOW	4888 MID	4888 HI	4880	4888 LOW	4888 MID	4888 HI
4888 4880 60	265	4880	4888 LOW	4888 MID	4888 HI	4880	4888 LOW	4888 MID	4888 HI
4888 4880 80	266	4880	4888 LOW	4888 MID	4888 HI	4880	4888 LOW	4888 MID	4888 HI
4888 4880A X	267	4880A	4888 LOW	4888 MID	4888 HI	4880A	4888 LOW	4888 MID	4888 HI
4888 4880A 60	268	4880A	4888 LOW	4888 MID	4888 HI	4880A	4888 LOW	4888 MID	4888 HI
4888 4880A 80	269	4880A	4888 LOW	4888 MID	4888 HI	4880A	4888 LOW	4888 MID	4888 HI

5-WAY + 3-WAY	PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6	OUT 7	OUT 8
88 / 82 + 80 X + 88	270	4880	4882	4888 LOW	4888 MID	4888 HI	4888 3WX LOW	4888 3WX MID	4888 3WX HI
88 / 82 + 80 60 + 88	271	4880	4882	4888 LOW	4888 MID	4888 HI	4888 3WX LOW	4888 3WX MID	4888 3WX HI
88 / 82 + 80A X + 88	272	4880A	4882	4888 LOW	4888 MID	4888 HI	4888 3WX LOW	4888 3WX MID	4888 3WX HI
88 / 82 + 80A 60 + 88	273	4880A	4882	4888 LOW	4888 MID	4888 HI	4888 3WX LOW	4888 3WX MID	4888 3WX HI
88 / 82 + 80 X + 87A	274	4880	4882	4888 LOW	4888 MID	4888 HI	4881A	4887A LOW	4887A MID/HI
88 / 82 + 80 60 + 87A	275	4880	4882	4888 LOW	4888 MID	4888 HI	4881A	4887A LOW	4887A MID/HI
88 / 82 + 80A X + 87A	276	4880A	4882	4888 LOW	4888 MID	4888 HI	4881A	4887A LOW	4887A MID/HI
88 / 82 + 80A 60 + 87A	277	4880A	4882	4888 LOW	4888 MID	4888 HI	4881A	4887A LOW	4887A MID/HI

3-WAY STEREO + 2-WAY	PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6	OUT 7	OUT 8
4888 3WX + 87 2WX	278	4888 LOW	4888 MID	4888 HI	4888 LOW	4888 MID	4888 HI	4887 2WX LOW	4887 2WX MID/HI
4888 3WX + 87 2W	279	4888 LOW	4888 MID	4888 HI	4888 LOW	4888 MID	4888 HI	4887 2W LOW	4887 2W MID/HI
4888 3WX + 87A 2WX	280	4888 LOW	4888 MID	4888 HI	4888 LOW	4888 MID	4888 HI	4887A 2WX LOW	4887A 2WX MID/HI
4888 3WX + 87A 2W	281	4888 LOW	4888 MID	4888 HI	4888 LOW	4888 MID	4888 HI	4887A 2W LOW	4887A 2W MID/HI

NOTES:

Presets 257	Stereo 3-Way with AUX / FULLRANGE Outputs (channels 1/5)
Presets 258 - 269	Stereo 4-Way Presets
Presets 270 - 273	5-Way Presets (GROUND STACKED 4880 or 4880A, FLOWN 4888 + 4882) + 4888 OFFSTAGE FILL
Presets 274 - 277	5-Way Presets (GROUND STACKED 4880 or 4880A, FLOWN 4888 + 4882) + 4887A/4881A OFFSTAGE FILL
Presets 278, 280	Stereo 3-Way + Center Cluster or Offstage Fill (outputs 7/8 = 4887 or 4887A 2WX preset)
Presets 279, 281	Stereo 3-Way + Distributed Fill (outputs 7/8 = 4887 or 4887A 2W preset)