



VERTEC VT4887A V4 PRESETS XTA DP226

		INPUT A	INPUT B	INPUT A+B			
2-WAY STEREO	PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6
4887A 2WX	10	AUX (FULLRANGE)	4887A LOW 2WX	4887A MID/HI 2WX	AUX (FULLRANGE)	4887A LOW 2WX	4887A MID/HI 2WX
4887A 2W	11	AUX (FULLRANGE)	4887A LOW 2W	4887A MID/HI 2W	AUX (FULLRANGE)	4887A LOW 2W	4887A MID/HI 2W
4887A DF	12	AUX (FULLRANGE)	4887A LOW DF	4887A MID/HI DF	AUX (FULLRANGE)	4887A LOW DF	4887A MID/HI DF
3-WAY STEREO	PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6
4887A + 4881A 60	13	4881A	4887A LOW	4887A MID/HI	4881A	4887A LOW	4887A MID/HI
4887A + 4881A 80	14	4881A	4887A LOW	4887A MID/HI	4881A	4887A LOW	4887A MID/HI
4887A + 4881A 100	15	4881A	4887A LOW	4887A MID/HI	4881A	4887A LOW	4887A MID/HI
4887A + 4882 60	16	4882	4887A LOW	4887A MID/HI	4882	4887A LOW	4887A MID/HI
4887A + 4882 80	17	4882	4887A LOW	4887A MID/HI	4882	4887A LOW	4887A MID/HI
4887A + 4880 60	18	4880	4887A LOW	4887A MID/HI	4880	4887A LOW	4887A MID/HI
4887A + 4880 80	19	4880	4887A LOW	4887A MID/HI	4880	4887A LOW	4887A MID/HI
4887A + 4880A 60	20	4880A	4887A LOW	4887A MID/HI	4880A	4887A LOW	4887A MID/HI
4887A + 4880A 80	21	4880A	4887A LOW	4887A MID/HI	4880A	4887A LOW	4887A MID/HI
3-WAY + AUX + OFFSTAGE FILL (2WX)	PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6
87A + 81A 60 + 2WX	22	4881A	4887A LOW	4887A MID/HI	AUX (FULLRANGE)	4887A LOW 2WX	4887A MID/HI 2WX
87A + 81A 80 + 2WX	23	4881A	4887A LOW	4887A MID/HI	AUX (FULLRANGE)	4887A LOW 2WX	4887A MID/HI 2WX
87A + 81A 100 + 2WX	24	4881A	4887A LOW	4887A MID/HI	AUX (FULLRANGE)	4887A LOW 2WX	4887A MID/HI 2WX
3-WAY + AUX + DISTRIBUTED FILL (2W)	PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6
87A + 81A 60 + 2W	25	4881A	4887A LOW	4887A MID/HI	AUX (FULLRANGE)	4887A LOW 2W	4887A MID/HI 2W
87A + 81A 80 + 2W	26	4881A	4887A LOW	4887A MID/HI	AUX (FULLRANGE)	4887A LOW 2W	4887A MID/HI 2W
87A + 81A 100 + 2W	27	4881A	4887A LOW	4887A MID/HI	AUX (FULLRANGE)	4887A LOW 2W	4887A MID/HI 2W
3-WAY + AUX + DOWN FILL (DF)	PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6
87A + 81A 60 + DF	28	4881A	4887A LOW	4887A MID/HI	AUX (FULLRANGE)	4887A LOW DF	4887A MID/HI DF
87A + 81A 80 + DF	29	4881A	4887A LOW	4887A MID/HI	AUX (FULLRANGE)	4887A LOW DF	4887A MID/HI DF
87A + 81A 100 + DF	30	4881A	4887A LOW	4887A MID/HI	AUX (FULLRANGE)	4887A LOW DF	4887A MID/HI DF
4-WAY + AUX + AUX SUB	PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6
87A / 81A + 4882	31	4882	4881A	4887A LOW	4887A MID/HI	AUX (FULLRANGE)	4882
87A / 81A + 4880	32	4880	4881A	4887A LOW	4887A MID/HI	AUX (FULLRANGE)	4880
87A / 81A + 4880A	33	4880A	4881A	4887A LOW	4887A MID/HI	AUX (FULLRANGE)	4880A
3 x 2-WAY	PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6
4887A 3 x 2WX	34	4887A LOW 2WX	4887A MID/HI 2WX	4887A LOW 2WX	4887A MID/HI 2WX	4887A LOW 2WX	4887A MID/HI 2WX
4887A 2 x 2WX + AUX	35	4887A LOW 2WX	4887A MID/HI 2WX	4887A LOW 2WX	4887A MID/HI 2WX	AUX (FULLRANGE)	AUX (FULLRANGE)
4887A 3 x 2W	36	4887A LOW 2W	4887A MID/HI 2W	4887A LOW 2W	4887A MID/HI 2W	4887A LOW 2W	4887A MID/HI 2W
4887A 2 x 2W + AUX	37	4887A LOW 2W	4887A MID/HI 2W	4887A LOW 2W	4887A MID/HI 2W	AUX (FULLRANGE)	AUX (FULLRANGE)

NOTES:

Presets 10, 34, 35	4887A 2WX preset (extended LF/HF response for medium / long throw applications)
Presets 11, 36, 37	4887A 2W preset (single enclosure, nominal flat for distributed, short throw / proximity fill applications)
Preset 12	4887A Downfill Preset (for VT4887A flown under VT4889)
Presets 13-21	Stereo 3-Way Presets for use of VT4887A with VT4881A, VT4882, VT4880 or VT4880A subwoofers
Presets 22-24	3-Way + Aux Output 4 (for monitoring system EQ) + Centre Cluster / Offstage Fill (4887A 2WX mode)
Presets 25-27	3-Way + Aux Output 4 (for monitoring system EQ) + Distributed, Proximity Fill (4887A in 2W mode)
Presets 28-30	3-Way + Aux Output 4 (for monitoring system EQ) + DownFill (4887A in DF mode)
Presets 31-33	4-Way preset for Ground Stacked 4882, 4880 or 4880A + Flown 4887A/4881A + Aux Output 5 + Optional Aux Sub Drive