



VERTEC VT4888 V4 PRESETS

dbx DriveRack 4800

INPUT 1	INPUT 2	INPUT 3	INPUT 4
---------	---------	---------	---------

3-WAY STEREO + AUX	PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6	OUT 7	OUT 8
4888 3WX	1	AUX (FULLRANGE)	4888 LOW	4888 MID	4888 HI	AUX (FULLRANGE)	4888 LOW	4888 MID	4888 HI

4-WAY STEREO	PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6	OUT 7	OUT 8
4888 + 4881A X	2	4881A	4888 LOW	4888 MID	4888 HI	4881A	4888 LOW	4888 MID	4888 HI
4888 + 4881A 60	3	4881A	4888 LOW	4888 MID	4888 HI	4881A	4888 LOW	4888 MID	4888 HI
4888 + 4881A 80	4	4881A	4888 LOW	4888 MID	4888 HI	4881A	4888 LOW	4888 MID	4888 HI
4888 + 4882 X	5	4882	4888 LOW	4888 MID	4888 HI	4882	4888 LOW	4888 MID	4888 HI
4888 + 4882 60	6	4882	4888 LOW	4888 MID	4888 HI	4882	4888 LOW	4888 MID	4888 HI
4888 + 4882 80	7	4882	4888 LOW	4888 MID	4888 HI	4882	4888 LOW	4888 MID	4888 HI
4888 + 4880 X	8	4880	4888 LOW	4888 MID	4888 HI	4880	4888 LOW	4888 MID	4888 HI
4888 + 4880 60	9	4880	4888 LOW	4888 MID	4888 HI	4880	4888 LOW	4888 MID	4888 HI
4888 + 4880 80	10	4880	4888 LOW	4888 MID	4888 HI	4880	4888 LOW	4888 MID	4888 HI
4888 + 4880A X	11	4880A	4888 LOW	4888 MID	4888 HI	4880A	4888 LOW	4888 MID	4888 HI
4888 + 4880A 60	12	4880A	4888 LOW	4888 MID	4888 HI	4880A	4888 LOW	4888 MID	4888 HI
4888 + 4880A 80	13	4880A	4888 LOW	4888 MID	4888 HI	4880A	4888 LOW	4888 MID	4888 HI

5-WAY + 3-WAY	PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6	OUT 7	OUT 8
88 / 82 + 80 X + 88	14	4880	4882	4888 LOW	4888 MID	4888 HI	4888 3WX LOW	4888 3WX MID	4888 3WX HI
88 / 82 + 80 60 + 88	15	4880	4882	4888 LOW	4888 MID	4888 HI	4888 3WX LOW	4888 3WX MID	4888 3WX HI
88 / 82 + 80A X + 88	16	4880A	4882	4888 LOW	4888 MID	4888 HI	4888 3WX LOW	4888 3WX MID	4888 3WX HI
88 / 82 + 80A 60 + 88	17	4880A	4882	4888 LOW	4888 MID	4888 HI	4888 3WX LOW	4888 3WX MID	4888 3WX HI
88 / 82 + 80 X + 87A	18	4880	4882	4888 LOW	4888 MID	4888 HI	4881A	4887A LOW	4887A MID/HI
88 / 82 + 80 60 + 87A	19	4880	4882	4888 LOW	4888 MID	4888 HI	4881A	4887A LOW	4887A MID/HI
88 / 82 + 80A X + 87A	20	4880A	4882	4888 LOW	4888 MID	4888 HI	4881A	4887A LOW	4887A MID/HI
88 / 82 + 80A 60 + 87A	21	4880A	4882	4888 LOW	4888 MID	4888 HI	4881A	4887A LOW	4887A MID/HI

3-WAY STEREO + 2-WAY	PRESET	OUT 1	OUT 2	OUT 3	OUT 4	OUT 5	OUT 6	OUT 7	OUT 8
4888 3WX + 87 2WX	22	4888 LOW	4888 MID	4888 HI	4888 LOW	4888 MID	4888 HI	4887 2WX LOW	4887 2WX MID/HI
4888 3WX + 87 2W	23	4888 LOW	4888 MID	4888 HI	4888 LOW	4888 MID	4888 HI	4887 2W LOW	4887 2W MID/HI
4888 3WX + 87A 2WX	24	4888 LOW	4888 MID	4888 HI	4888 LOW	4888 MID	4888 HI	4887A 2WX LOW	4887A 2WX MID/HI
4888 3WX + 87A 2W	25	4888 LOW	4888 MID	4888 HI	4888 LOW	4888 MID	4888 HI	4887A 2W LOW	4887A 2W MID/HI

NOTES:

Presets 1	Stereo 3-Way with AUX / FULLRANGE Outputs (channels 1/5)
Presets 2-13	Stereo 4-Way Presets
Presets 14-17	5-Way Presets (GROUND STACKED 4880 or 4880A, FLOWN 4888 + 4882) + 4888 OFFSTAGE FILL
Presets 18-21	5-Way Presets (GROUND STACKED 4880 or 4880A, FLOWN 4888 + 4882) + 4887A/4881A OFFSTAGE FILL
Presets 22,24	Stereo 3-Way + Center Cluster or Offstage Fill (outputs 7/8 = 4887 or 4887A 2WX preset)
Presets 23, 25	Stereo 3-Way + Distributed Fill (outputs 7/8 = 4887 or 4887A 2W preset)