



VERTEC VT4887 2-WAY V4 PRESETS

Crown I-Tech (26 dB Gain)



NAME	PRESET	DESCRIPTION	CH 1	CH 2
MH/MH 4887 2WX	1	VT4887 Mid-High Section: 2WX mode (extended LF/HF response)	4887 MID/HI	4887 MID/HI
LF/LF 4887 2WX	2	VT4887 Low Section: 2WX mode (extended LF/HF response)	4887 LOW	4887 LOW
LF/MH 4887 2WX	3	VT4887 Low / Mid-High Sections: 2WX mode (extended LF/HF response)	4887 MID/HI	4887 MID/HI
MH/LF 4887 2WX	4	VT4887 Mid-High / Low Sections: 2WX mode (extended LF/HF response)	4887 LOW	4887 LOW
	5	<i>empty (intentionally blank)</i>		
MH/MH 4887 2W	6	VT4887 Mid-High Section: 2W mode (nominal flat for distributed, short throw/proximity fill)	4887 MID/HI	4887 MID/HI
LF/LF 4887 2W	7	VT4887 Low Section: 2W mode (nominal flat for distributed, short throw/proximity fill)	4887 LOW	4887 LOW
LF/MH 4887 2W	8	VT4887 Low / Mid-High Sections: 2W mode (nominal flat for distributed, short throw/proximity fill)	4887 MID/HI	4887 MID/HI
MH/LF 4887 2W	9	VT4887 Mid-High / Low Sections: 2W mode (nominal flat for distributed, short throw/proximity fill)	4887 LOW	4887 LOW
	10	<i>empty (intentionally blank)</i>		
MH/MH 4887 DF	11	VT4887 Mid-High Section: DF mode (for use with VT4887A flown under VT4889)	4887 MID/HI	4887 MID/HI
LF/LF 4887 DF	12	VT4887 Low Section: DF mode (for use with VT4887A flown under VT4889)	4887 LOW	4887 LOW
LF/MH 4887 DF	13	VT4887 Low / Mid-High Sections: DF mode (for use with VT4887A flown under VT4889)	4887 MID/HI	4887 MID/HI
MH/LF 4887 DF	14	VT4887 Mid-High / Low Sections: DF mode (for use with VT4887A flown under VT4889)	4887 LOW	4887 LOW