NEW FEATURES:

New speaker support:

• Added preset support for the VTX B28.

New Navigation UI:

- The top ribbon interface has been redone to simplify navigation and mode switching.
- Mode switching has been moved and the ribbon now displays the functions available to the selected mode.
- Mute protection has been moved from the ribbon to the grouping toolbox and is available in all online modes.
- The Groups mode has been redone and the group editing buttons are now displayed on the ribbon.
- The ribbon can be minimized to improve space for smaller screens and tablets.

Speaker assignment improvements:

- Drag-and-drop for bandpass assignment is now also available for 2-channel Crown I-Tech HD amplifiers.
- Use Shift + Left click to select an array and drag-and-drop the array to the desired amplifier rack to connect speakers to amplifiers.

Container (rack) naming improvements:

- Rack names can now be reassigned in the Go Online mode and without having to clear and recreate the racks.
- Once in Go Online mode, select a rack and click the Rename button on the ribbon.

GENERAL IMPROVEMENTS:

- The application title bar has been updated to follow Windows 10 UI guidelines. The window controls are now larger and easier to use on touch devices.
- Custom racks can now be created without having to select bandpass labels. This significantly reduces the steps and time needed to create a custom rack. Amplifier channels are assigned the standard "none" channel label. Drag and drop a speaker to assign channel labels on the fly.
- Inside-out wiring can now be assigned to front fills without having to start from a template.
- · Changing subwoofer circuit grouping no longer erases the EDS delay values.
- Factory and user groups can now be rearranged as needed. Click and drag to change the order of groups. Right-click and select rename to change a group name from any mode.
- The User Groups section is now collapsible like the Venue groups.
- The default channel label for V-Rack 12000HD is now SUB.
- The zoom position is now maintained when switching from mode to mode. When new devices are added to the venue, PM now zooms out to show all devices.
- The array and speaker positions never change when going from mode to mode and when the circuit jumpers are removed.
- EQ filter ON/OFF buttons now turn green when the filters are active.
- · General Installer and Auto Update improvements.

BUG FIXES:

- Addressed a problem related to the "Clean Filter" warning on the I-Tech 4x3500HD LCD displays. The warning will no longer be displayed for no reason.
- Addressed several problem related to keyboard usage on touch devices. In some cases, the Windows 10 and the Performance Manager keyboards were active. Now, only the PM keyboard is shown, improving usability on Windows 10 touch devices.

- Addressed a problem that EQ filters could get corrupted when the HiQnet addresses of amplifiers where changed.
- Fixed a problem where devices would not associate to offline devices the first time a drag-and-drop was used in Go Online mode.
- Addressed a problem where the Input Priority button was always showing medium priority.
- The noise-generator in test system mode can now take values in Hz also.

VERSION 2.6.5

NEW FEATURES:

Support for LAC-3.4.0

BUG FIXES:

- Addressed several bugs related to LAC import of A12/A12W ground stack arrays.
- In some cases, LACP filters for ground stack arrays were applied in the reverse order when imported from LAC.

VERSION 2.6.4

NEW FEATURES:

Support for LAC-3.3.1

IMPROVEMENTS:

- Performance improvements when opening venue files.
- VTX A12W can now be placed above or below VTX A12.
- LACP filters from LAC-2 files are now imported correctly.
- · Smaart measurement traces are now positioned in front of the EQ traces for better visibility.
- · Subwoofer delay values are retained after changing the amplification mode (Parallel / Discrete).
- · Cardioid orientation restrictions have been removed, and any subwoofer can be set to cardioid.

BUG FIXES:

- Addressed several bugs related to EQ copy/paste functionality in the Group EQ and LACP panels.
- In some cases, the "Filters Remaining" count in Group EQ was not showing the correct value.
- Fixed System Health warning states in Run Show Mode. In some cases, the button was red without errors.
- · Removed the LAC import icon from individual subwoofer containers.
- Addressed a bug related to FL presets and Fill templates.
- Improved B18 import functionality. In some cases, the orientation was not transferred correctly.
- Fixed several bugs related to LAC-3 import functionality and LACP filters.
- In some cases, the "ALL ON" button in Group EQ was not working correctly.
- The polarity for B18 subwoofers was not shown when importing arrays from LAC-3.

NOVEMBER 2018

VERSION 2.6.3

NEW FEATURES

Support for the new VTX A8:

- The new VTX A8 has been added to Performance Manager 2.6.3
- · Preset support includes standard array presets for full-range and 80Hz modes along with full-range and 80Hz fill presets
- · For more information on the VTX A8 presets, refer to the VTX A8 User Manual and Preset Library Sheets
- VTX A8 presets for Audio Architect are available for download at <u>www.jblpro.com</u>

Support for the new VTX B18:

- The new VTX B18 has been added to Performance Manager 2.6.3
- · Preset support includes standard 60 and 80Hz modes along with 60 and 80Hz presets for cardioid configurations
- For more information on the VTX B18 presets, refer to the VTX B18 Preset Library Sheets
- VTX B18 presets for Audio Architect are available for download at <u>www.jblpro.com</u>

Support for LAC-3.2.0:

- · Added import support for the latest version of the Line Array Calculator
- VTX A8 and B18 arrays created in LAC-3.2 can now be imported in Performance Manager V2.6.3

IMPROVEMENTS

Add Speakers Mode: VTX Subwoofers are now separated in to their own section

February 2018

Version 2.6.1 / 2.6.2

Bug Fixes

- Addressed an issue related to F-Series presets and 2-channel amplifiers.
- CPU optimization for Run Show mode. Run Show mode now takes significantly less CPU power.
- Addressed an issue related to VTX G28 and VTX S28 presets when used with VTX V20. The subwoofer presets were not loaded correctly when the subwoofer preset was set to 60Hz.

Version 2.6.0

December 2017

NEW FEATURES

Support for the new VTX A12W:

The new VTX A12W (wider 120° coverage) has been added to Performance Manager 2.6.0. The VTX A12W can be used in standalone arrays or in combination arrays with the 90° VTX A12. A slightly different color is used for the A12W speaker icon for easier identification.



Updated VTX V25-II speaker presets:

Performance Manager 2.6 is now using the latest VTX V25-II speaker presets (Release 2.1). Improvements include:

- Improved HF limiter settings for 2-channel amplifiers to prevent amplifier clipping
- Improved HF tonal balance above 8kHz

Devices files and the detailed change log for the new V25-II R2.1 presets can be downloaded from the JBL Pro website.

LAC import support for VTX A12W:

VTX A12W created in LAC version 3.1 can be imported into performance manager.

LAC import support for VTX V20 BA (Bi-Amp):

The VTX V2O BA (Bi-Amp) speaker type has been added to LAC version 3.1. V2O Bi-Amp arrays created in LAC-3.1 can be imported into Performance Manager version 2.6. V2O speaker come into LAC in Bi-Amp mode with the correct circuiting.

LAC import support for distributed subwoofer arrays:

Ground stacked distributed subwoofer array can now be imported into Performance Manager version 2.6. Subwoofer stacking layout, grouping and delay settings transfer from the LAC file to Performance Manager.

How to import a subwoofer array:

- Navigate to the "Add Array Templates" and then "Subwoofer Ground Stacks"
- Drag-and-drop the LAC-3 logo to the venue space
- Select the LAC-3 file to import and then Clicp open
- The subwoofer array is placed in the venue

			Performance Manager - New Ve	nue			Office Verse 0 Detected 0 Matched 0	- □ × Synchronizat 0 Ξ 0
File Mode Tools Image: Add Ammy Add Ammy Speakers Add Ammy and DSP See Speaker And CSP See Speaker And SP		Ture Bun Align Space				Venue (System Engineer)	URINN Renue: 6 Depictuel 6 Masched: 0	synchronized 6 💷 🛞
Office Design Add Army Templates								
(a) Variable Rows - inside to out								
		_		unized any				
		Import LAC3 Project File	rage (\\vboxsrv) (F:) > Temp > Test Files			✓ ð Search Test Files	×	
(a) Variable Columns		Organize • New folder	rege (///doxan/) (rt) > remp > rest rives			V O Search lest rise		
Windle Columns Z O O		# Quick access	Name	Date modified Type				
• • • • • •		Desktop x*	E Sub Array 1 x 12 Cardioid Sub Array 6 x 3 Hor Cardioid	12/5/2017 448 PM LAC 12/5/2017 451 PM LAC	3.64 3.63			
Import Subwoofer Array		Downloads # Decorrive (\\vbcccorv) (E:) #	Sub Array 6 x 3 Ver	12/5/2017 4:59 PM LAC 12/5/2017 4:30 PM LAC	3 file 7 KB			
LINE ARRAY		🛫 Storage (\\vbaxsrv) (F:) 🦪 🦛	V208A + \$25 Array 1 V208A Array 1	12/5/2017 5:03 PM LAC 12/5/2017 5:02 PM LAC	3 file 4 103 3 file 6 108			
CALCULATOR 3		JBL #	T200A Array 1	12/3/2017 Stee PM DAC	3 THE 0 ND			
		Recycle Bin #						
		ConeDrive						
		Network						
		File name: Subwo	ofer Arrays			V LAC3 File (*.lac3)		
						Open	Cancel	
Suspended Arrays								
Subwoofer Ground Stacks Distributed Fills								
Special Templates								
			Performance Manager - New Ver	we*				- = ×
File Mode Tools								Synchronized 0 🗏 🕲
Add Ampy Add Amps Set Speaker Templates Speakers and DSP Process Office Design	Ga Edit Select Input Test Online Groups Sources System Online Control	Turne Rum Align Space System Show Node Functions						
Add Array Templates								• + 🖸
Voriable Rows - Inside to out								
· • • • • • • • • • • • • • • • • • • •								
Warlable Columns								
• 0000								
Import Subwooler Array								
LINE ARRAY CALCULATOR 3"								
	Sac	k1	Stack 2		Stack 3		Stack 4	
							11 m 11	
	-S1 + S2	t S +	*S1 + S2 S1 + S2 *S1 + S2		"S1 + \$2* 		•S1 + \$2* S1 + S2 •S1 + S2	
	+ 52	+ S 2	+ S2 + S2				S1 + S1 + S1 +	
Suspended Arrays Subwooder Ground Stacks								
Distributed Fills								
Special Templates								

Bug Fixes

XIRI.

- Improved synchronization handling for when I-Tech HD devices drop off the network due to unexpected connectivity loss. When connection is restored, Performance Manager is now sending all the latest parameters from the computer to the amplifiers.
- Improvements to the EQ-Analysis tool introduced in Performance Manager version 2.5.1. The EQ-Analysis tool is used to detect potential Group EQ consistency issues that could cause some EQ filters to disappear from the Group EQ panel.
- Several reliability updates to the EQ copy/paste function
- Addressed an issue were subwoofer polarity preference would be lost when sending parameters

Version 2.5.2

Bug Fixes

JBL

- Addressed an issue related to preset labels on V20 and 2-channel amplifiers.
- Addressed several EQ copy-all/paste-all issues. In some cases copy-all/paste-all could corrupt the Group EQ filters.
- Addresses an issue causing Performance Manager to crash when deleting a speaker that was not assigned to an amplifier

September 2017

Version 2.5.1

NEW FEATURES

New Daylight mode:


Performance Manager Version 2.5.0 includes a new user interface mode that is more suitable for use outside. Daylight mode uses a brighter color scheme to increase contrast. The new mode can be activated and deactivated at any time from the Application Options panel.

NORMAL - DARK



Shift-click to select multiple objects:

- Use Shift + mouse click to select multiple band-passes.
- Select the top left corner of an array and then shift + click the lower right corner to select the entire array.
- Drag-and-drop the entire array to an amplifier rack to quickly amplify an array.
- Shift + Click can also be used when creating users groups to speed up the process.

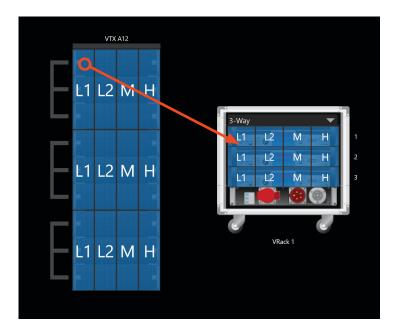


DAYLIGHT MODE - LIGHT

Input selection is now possible on a circuit by circuit level. In previous versions of Performance Manager, input source selection was done on the array level, meaning the same input was selected to feed the entire array. In some situations, it is desirable to set part of an array to a different input than the rest. A good example of this is when mixed arrays (Subwoofers + Main speakers) are created and the subwoofers are fed from a different input. Performance Manager 2.5 now allows for selecting inputs for each circuit.

A new button has been added to the Select Input Sources page to switch between Array Input Source selection and Circuit Input Source selection.


File	Mode	Tools										Small	V20 System.per	formance	•*	
■	⊡⊕	• • •		4			Ţ				äää ⊞∭			\odot	₫₿	
Add Array Templates		Add Amps and DSP	Set Speaker Presets	Go Online	Edit Groups	Select Input Sources	Test System	Tune System	Run Show	Array Input Sources	Circuit Input Sources	Input Meters	Input Priority Status	AES Status	AES Trims	
	Offlir	ie Design				Onli	ne Control					Mode Fun	ctions			

When Array Input Sources is selected, Performance Manager behaves like versions before where a single input can be selected for the entire array. When Circuit Input Sources is selected, a different input can be set for each circuit of an array.

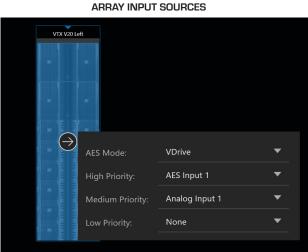

VTX V20 Le	ft		
\supset	AES Mode:	VDrive	▼
	High Priority:	AES Input 2	▼
	Medium Priority:	Analog Input 2	▼
	Low Priority:	None	▼
\Rightarrow			


CIRCUIT INPUT SOURCES

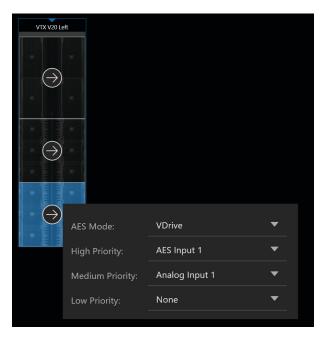

Factory speaker presets are always stored within the Performance Manager venue file. This ensures that regardless of what Performance Manager version is used, a sound system will always sound the same as the time of the original setup. Factory Speaker Presets are sometimes updated to introduce improvements and performance upgrades. For example, recently, most VTX speaker presets were updated in Performance Manager Version 2.3 (Release 2). If a venue file that was created in a version prior to 2.3 was reused, the older versions of the presets would have been used. Because of that we often ask users to re-write the venue files when new Factory Speaker Presets are available to ensue that the latest Speaker Presets are used.

File	Mode	Tools									Performance Manager - New Venue*
Ħ	∎	• • •		4						3	
Add Array Templates	Add Speakers	Add Amps and DSP	Set Speaker Presets	Go Online	Edit Groups	Select Input Sources	Test System	Tune System	Run Show	Reload Presets	
	Offline	e Design				Onli	ne Control			Mode Functions	


With Performance Manager version 2.5, we are introducing a new feature that refreshes the speaker preset library without having to re-write the venue file. A new button is now available in Set Speaker Presets mode called Reload Presets. Once selected, Performance Manager will ask for permission to refresh the presets.

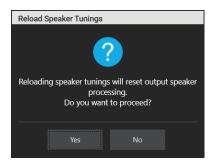


Once confirmed, Performance Manager will reload all speaker presets. Note that during this process, all user related adjustments like Group EQ, Source Selection and Array Calibration, remain intact. The only thing changing is the factory speaker presets. Make sure to select "Auto Match and Send" when going online.

Auto-updater:


An auto-update function is now built-in to Performance Manager 2.5. The updater checks online for the latest version of PM every time the application starts. If a new version is available, an option is presented to download and update the application. A manual check can be performed from within the File menu (File > Check for Updates).

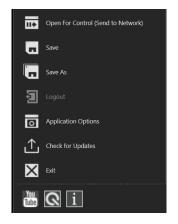

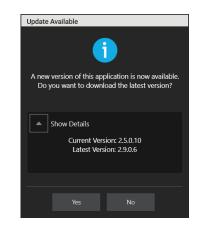


Performance Manager version 2.5 includes a new Array Template called the "Repeating Array Template". The new template can be found under the new "Special Templates" group and includes some unique grouping and repeating functions that can significantly speed up the system design process especially when a design includes many identical or nearly identical arrays (like delay arrays or distributed systems).

When dropped into a venue, the new template asks for confirmation as to which functions should be repeated/mirrored across all the arrays. In the example below, 4 arrays are selected and the checked parameters will be grouped across all 4 arrays. Parameters not checked remain independent and can be adjusted on a per array basis.

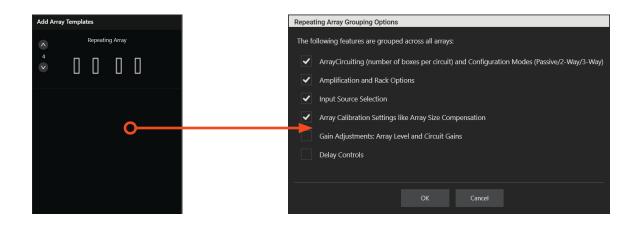

Groups are automatically created to speed up the process. One "Master" group is available along with individual groups for each array within the repeating group. Additional User Groups can be quickly created if necessary.

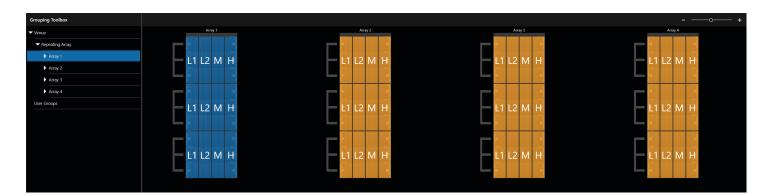

This new template is not limited to main arrays, and it can also be used for smaller front fill systems or subwoofer arrays. Multiple repeating templates can be used in a single venue to accommodate any scenario.

This new template could potentially replace all other existing templates with functionality that is much close to what the application or the user requires.

Bug Fixes

XIRI

- Addressed an issue regarding user groups where a system would remain associated with a group even after it was removed from that group
- Addressed an issue where the automatic zoom function was incorrectly triggered when creating manual speaker to amplifier connections.
- Addressed several HiDPI scaling issues on Windows 10 computers with high resolution displays.
- Addressed an issue related to polarity and cardioid subwoofer arrays. In some rare cases the polarity for the rear facing subwoofer was not reversed.
- Addressed an issue where in some cases, Crown I-Tech HD amplifiers would reboot during a venue synchronization.

Version 2.4.2

Bug Fixes

XIRI.

• Addressed an issue regarding loading VTX F35 presets in to 2-channel I-Tech HD amplifiers.

Version 2.4.1

Bug Fixes

- F-Series Preset Library update:
 - Updated the F Series preset library to the latest version (Release 2.1)
 - Addressed several F Series preset loading issues
 - For more information on the F-Series presets refer to the F Series Preset Library Sheets
- VTX V20 Preset Library update:
 - Updated the VTX V2O preset library to the latest version (Release 2.1)
 - The update addresses a bandpass gain issue related to the Bi-Amp presets
 - For more information on the VTX V20 presets refer to the VTX V20 Preset Library Sheets
- Addressed an issue regarding AES Trims.
- Addressed several LAC import errors
- PM Version 2.4.1 is now compatible with LAC-III Beta 2

August 2017

July 2017

VERSION 2.4.0

May 2017

NEW FEATURES

New Speaker Preset Support for VTX A12

- Full preset support for the new VTX A12 system.
- Refer to the VTX A12 User Manual and Preset Library sheets for more information on the available presets.

Default AES Mode for V-Rack 4x3500HD

Arrays powered by Crown Audio V-Rack 4x3500HD use V-Drive by default as the AES Mode.

Inputs Selection Improvements

- User Input selection preferences remain unchanged after a speaker preset change.
- Example: When switching from VTX V25-II 60 to VTX V25-II 80, input selection settings like type and priority remain the same.

Go Online Mode Improvements


Discovered Devices and Online Devices are now presented in an alphanumerical order (for real this time).

Group EQ

• Added one more filter to Group EQ for a new total of 12 user filters.

New Network Settings Options

There is now a new option in Network settings to retain rack/container names when matching devices. In previous versions
of Performance Manager, software names always overwrote network names. A new option is available to always retain (never
overwrite) network names.

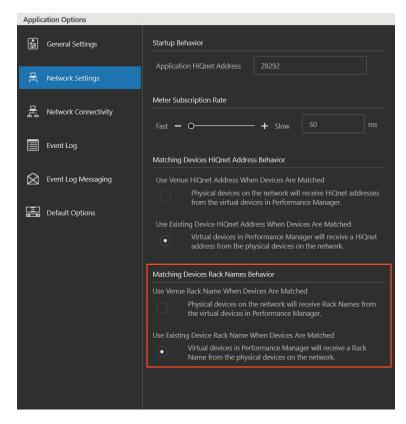

New Array Size compensation filter

 A new array size compensation filter was developed to easily manage the LF response of VTX line array systems. The new Array Size Compensation filter is available in the Calibrate Arrays mode and works in conjunction with new VTX presets released in Performance Manager 2.3.X.

Background:

The frequency response of a line array is determined by many factors, including the array size (number of boxes), array curvature (box-to-box angles), and the listening distance. JBL factory presets are designed to create a well-balanced tonal starting point for given array conditions. For example, the standard array presets are designed to work optimally with array sizes between 8 - 12 cabinets and equal impact spacing for a flat listening plane. An array with these parameters will generate a flat frequency response in the HF region with a gradual rise in LF energy. The frequency point where the response starts rising depends on the array parameters mentioned above. A relatively short array will start rising lower in frequency, and a longer array will start rising higher in frequency. The Array Size Compensation Filter was specifically designed to shape the LF response of an array with a single, adjustable parameter with all other parameters optimized in the background. The gain adjustments can take positive or negative values to best suit each application. To remove LF for long arrays apply negative gain, and to add LF to short arrays apply positive gain values.




- The new Array Size Compensation is a hardware supported feature and requires the latest firmware update for the Crown Audio I-Tech HD amplifiers.
- The results of the new filter can be predicted in the new version (Version 3) of the JBL Line Array Calculator.

New firmware for Crown Audio I-Tech HD Series amplifiers

XIRI.

- Added support for the new JBL Array Size Compensation filter with a new dedicated block
- Ul improvements to expose the Array Level control to the main amplifier Ul
- The new firmware is available for both 2-channel and 4-channel amplifiers
- The new firmware and device panel UI is common across Performance Manager and Audio Architect (requires the latest update for Audio Architect).

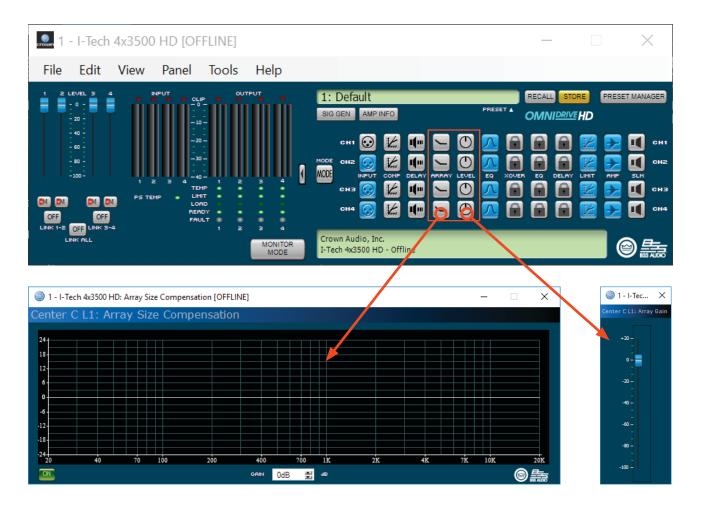

Import multiple amplifier racks

• There is now a number selection control next to amplifier racks that allows from importing multiple amplifier racks in to a venue. This is true for both Crown Audio V-Racks and custom racks



Support for LAC-3 import

•

- With the release of LAC-3 comes support for LAC-3 venue file import.
- Since there are now two versions of LAC (LAC2 for Vertec and LAC3 for VTX including A12), the LAC software has been separated from Performance Manager and going forward will be treated as an independent platform. This will allow JBL to better develop future more advanced features for the prediction software platform.
- Arrays designed in LAC2 or LAC3 can be imported into Performance Manager and all related parameters including, circuit groups, gain shading and DSP adjustments carry over to Performance Manager like before.

 LAC O	👯 Open Project File								×
Center	← → * ↑ ■ > TH	is PC → Desktop				5 v	Search Desktop		P
	Organize 🔹 New fold						[]==	•	?
	A Quick access	Name	Date modified	Туре	Size				
	📃 Desktop 🚿	Main L-R VTX A12 Arrays.lac3	4/27/2017 1:25 PM	LAC3 File	9 KB				
	United Street Downloads	Side Array VTX V20.lac3	4/27/2017 1:25 PM	LAC3 File	9 KB				
	neDrive (\\vbo: 🖈								
	JBL 🖈								
	Performance Ma 🖈								
	🔯 Recycle Bin 🖈								
	i OneDrive								
	This PC								
	Network								
	- Network								
	File n	ame: Main L-R VTX A12 Arrays.lac3				~	LAC3 Files (*.lac3)		~
							Open	Cancel	5
							Open	Cancel	


The work-flow goes as follow: design the system in LAC3 (or LAC2), import the arrays in Performance Manager, send the settings to the devices.





New snapping and object alignment features

- Performance Manager now includes an advanced object alignment feature that help align items and keep venue files looking organized.
- When an object is selected and moved within the venue, snapping assist lines are presented to align the moving object with other elements within the venue

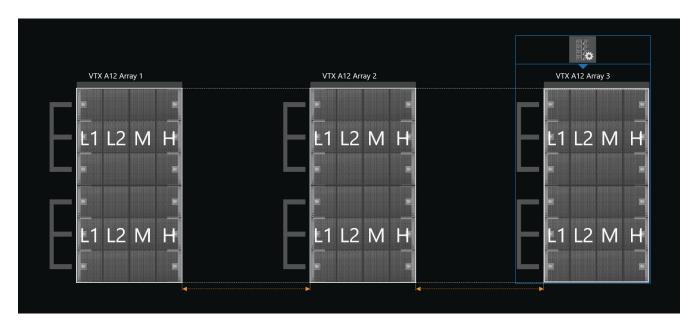

- Performance Manager can also calculate the equal distance points between objects and present the orange "Equal Distance" arrow lines
- The new snapping features works across speakers and amplifiers



New Default Settings menu in Applications Options

- The Default Options menu allows for selecting the default mode for speakers and amplifiers racks
- Performance Manager sets all speakers to the active 3-way or active 2-way modes by default. If a system is always used in
 passive mode, PM can be set to set that by default This eliminates several steps during the design stages
- The same can be selected for amplifier racks. Crown Audio V-Racks are used by default. A custom rack created by the user can be set as the default amplification option
- When "Let PM decide" is selected, Performance Manager uses Crown Audio V-Rack 4 for TOP cabinets and V-Rack 2 for Subwoofers.

Application Options			Application Options		
General Settings		~	General Settings		Bi-amped 💌
<mark>岩</mark> Network Settings		▼	吕 Network Settings		
📇 Network Connectivity		▼ ▼	是 Network Connectivity	Default VTX V20 Mode Default Rack for Amplification	Active <
Event Log			Event Log	Default Rack for Amplification	2-Way Passive
Event Log Messaging			Event Log Messaging		
E Default Options			Default Options		
			Application Options		
			上 Network Settings	Default VRX900 Mode Default M20 / M22 Mode	
			물 Network Connectivity		
			Event Log		VRack4x3500
			Event Log Messaging		6x I-Tech HD
	OK Cancel Help		Default Options		

New EQ Analysis Function

 A new EQ analysis function has been implemented in Performance Manager 2.4. The new function is triggered when entering Tune System mode and it checks the EQ filters found in the online devices against the filters found in the Performance Manager venue file. If there are discrepancies between the device filters and Performance Manager a worning is presented with the option to sync the two together.

New Firmware update UI

- The firmware update UI has been updated to match the Performance Manager 2.0 styling
- The new UI is also compatible with Retina like displays and adheres to Windows DPI scaling factors (requires Windows 10)

BUG FIXES

JBL

ROFESSIONAL

- Addressed an issue preventing users from navigating from Group EQ to Calibrate Arrays
- Increased the size the MUTE icons under the Grouping section
- Updated all the MUTE icons to high resolution images to remain sharp even at 100% zoom
- General performance improvements
- Updates to the ribbon color notifications in Run Show mode

Version 2.3.3

Bug Fixes

JBL

- Speaker presets: addressed a preset loading issue with VTX F Series
- Go Online Mode: addressed an issue causing the Go Online Mode to freeze under some situations

Version 2.3.1 & 2.3.2

Bug Fixes

- Speaker presets: addressed a preset loading issue with non-standard amplifier channel configurations
- Speaker presets: addressed a preset loading issue with VTX V20 in Bi-Amp mode

April 2017

March 2017

Version 2.3.0

New Features

New Speaker presets for all VTX Line Array systems

- New speaker presets for VTX V20, VTX V25-II and VTX Subwoofers
- VTX V20 Release 2.0 presets:
 - Improved phase response for Bi-Amp and active presets. All VTX speakers have the same phase response
 - Improved LF to MF/HF tonal balance for average sized arrays (reduced energy in the 300Hz area)
 - Simplified Preset selection options with one array preset available (eliminated ST, LT and XLT)
 - Simplified preset naming convention
 - New FL (FILL) presets for use in fill applications. Distributed Fill templates automatically select the FL presets
- VTX V25-II Release 2.0 presets:
 - Improved HF tonal balance
 - Reduced LF energy below 100Hz on full range presets for better tonal balance
 - Simplified Preset selection options with one array preset available (eliminated ST, LT and XLT)
 - New preset naming convention
 - New FL (FILL) presets for use in fill applications. Distributed Fill templates automatically select the FL presets
- VTX Subwoofer presets are now universal and can be used with any VTX system
 - Example: The same VTX S28 80 preset is compatible with both the VTX V20 80, VTX V25-II 80 and any other VTX product

Notes:

- For more information on the new VTX presets refer to the Preset Library sheets
- VTX V25-II R2.0 Preset Library: Link
- VTX V20 R2.0 Preset Library: Link
- Performance Manager venue files must be rebuilt to take advantage of the latest VTX presets

New Delete options

- Delete now possible via the right-click context menu
- Press and hold to activate right-click context menu on touch devices

New Keyboard shortcuts for Test System mode

- G = Generator ON/OFF
- + / = Controls the generator level in 5dB steps

February 2017



February 2017

- Support for multi-touch input on Windows 10 devices with touch displays
- Multi-touch gestures can be used to navigate the venue



Pinch to Zoom Use the Pinch gestures to zoom in and out



2-Finger Drag Use the 2-finger drag gesture to move around the venue




Double-tap Use double-tap to quickly zoom out to the home location




1-Finger Drag Use the 1-finger drag to select or highlight items

New meters in Run Show mode

- Gain reduction meters are now combined into the same meter container as the output meters
- Output meters move from the bottom up where the gain reduction meters activate from the top down
- When the meters overlap, the gain reduction meters are displayed at the top









HRL

- When a speaker is dragged and dropped directly into the venue, a selection dialog box presents the user with the possible configuration options for that specific system (example: Suspended Array, Ground Stack or Distributed Fill)
- The User Interface for this dialog box has been reworked to show the exact configuration for that system with the correct speaker images

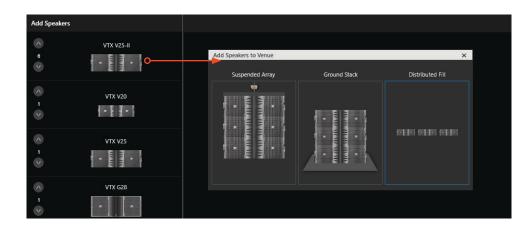

New speaker to amplifier association options

- Press-and-hold the Control key to select multiple bandpasses (i.e. L1, L2, M, H)
- Drag-and-drop the selected bandpasses to an amplifier
- All 4 connections are completed with one drag-and-drop

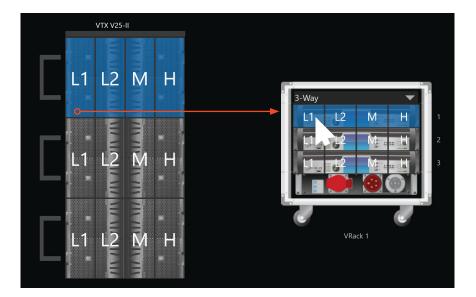

Updates to Measurement Integration

- Added Delay Tracking command for the Smaart API •
- Delay Tracking can be switched ON/OFF within Performance Manager for each channel independently
- Activating Delay Tracking in Performance Manager will activate Delay Tracking in Smaart .



New in PM 2.3

Smaart 8

Bug Fixes

- Addressed some issues with the dbx DriveRack 4800 processor
- Addressed issues regarding JBL DP-DA powered line array products
- Addressed a Windows Firewall issue that was preventing Performance Manager from firmware updating Crown Audio I-Tech . HD series amplifiers without bypassing the Firewall.
- The Firmware Update panel is now HiDPI enabled and can work with Windows display scaling on high resolution displays
- Fixed a UI issue with Input Priority page in Run Show mode. The ribbon button would sometimes change to RED without an input switch
- Addressed issues related to the Access control feature
- Fixed broken help file links

Version 2.2.0

New Features

XIRL

Array size can be adjusted without having to reconnect speakers to amplifiers


• Example: A 16x element array can be resized to a 12x element array using LAC-II. Speaker to amplifier connections remain intact

Performance Manager[™] and Audio ArchitectTM can now run on the same computer

- Note: PM and AA should address a different set of devices
- Example: Audio Architect is controlling BSS London devices and Performance Manager is controlling Crown I-Tech HD amplifiers

New inside-to-out wiring mode for subwoofer and distributed fill arrays

- New drop down menu in Configuration panel for selecting Inside out wiring
- Delay and level adjustments are performed symmetrically

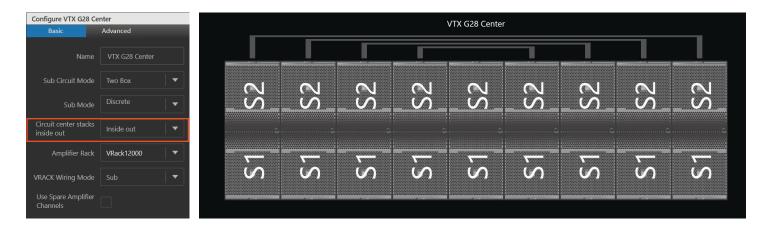

New Zoom keyboard shortcut

• Use spacebar to Zoom to selected areas

Performance Improvements

Group EQ improvements

- EQ dragging is significantly faster for large systems
- Opening time for the Group EQ panel has been reduced

Venue Zoom Improvements:

- New Zoom animations for smoother transitions
- Improved frame rate performance on lower-end computers

Navigation speed improvements:

Mode to mode switching is now faster



- Going in and out of "Set Speaker Presets" is significantly faster
- Group Selection is now faster
- Going in and out of "Run Show" is faster

Muting/Unmuting for large systems is now instantaneous

Memory usage improvements

Updates to Measurement Integration

- Improved display for RTA bars
- Capture trace functionality improvements
- New Reset Averages command (new keyboard shortcut: V)

Bug Fixes

- Addressed a Zoom-in bug where PM would zoom too far
- Deleting a speaker no longer deletes the entire user-group
- Deleting speakers/circuits does not remove all circuits
- Fixed issues with Device Locate functionality in Go Online mode
- Discovered devices in Go Online mode are now displayed in alphanumerical order
- Performance Manager firmware update functionality improvements. No need to re-enable bypassing the firewall after each new PM version update


Version 2.1.0

New Features

Measurement integration with Rational Acoustics SMAART 7/8

- New measurement mode created for directly interfacing with SMAART and taking advantage of a wide variety of key features
- Wireless access in PM to real-time measurement data is possible via Wi-Fi connection to SMAART host computer
- The new mode can be switched on via the application options



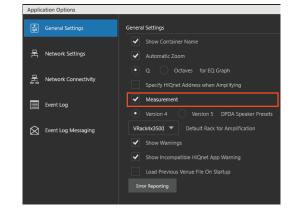

Go-online mode Improvements

- Built-in NetSetter functionality including Clear Containers and Rescan Network commands
- New side-by-side layout for more intuitive operation
- Optimized rack and device organization for easier online device management
- Improved "Locate Device" functionality with a dedicated ON/OFF button
- The computer network adapter can now be selected from the Go Online page

New Select Input Sources mode functionality

- Added Input Meters page
- Added AES Trim page for gain matching digital audio signals to analog backups
- Added Input Priority Status page to monitor current amplifier input source
- Added AES Status page for real-time monitoring of PLL

User Group improvements

- User groups no longer follow template symmetry
- · This enables creation of more specific user groups for controlling key areas of array coverage

Line Array Control Panel updates (Array Calibration)

- Filters are now grouped in Array-level and Circuit-level Filters
- Default frequency values updated to reflect more optimal starting frequencies and filter types and improve consistency across VTX systems world-wide
- Updated filter type options

XIRI



Custom Rack improvements

- Custom amplifier racks can now be created "on the fly" similar to Audio Architect with a simple drag-and-drop operation in order to address last-minute add-ons or similar situations
- Amplifiers can be added to custom racks "on the fly"
- It's now possible to create custom rack layouts with more than 8x amplifiers (installs)

Add Amps and DSP	
▲ I-Tech 4x3500 HD 3 ✓	
I-Tech HD Series	None None None 1 None None None 2
	None None None 2
	None None None 3
	Rack 1

- Speaker dialog graphics updated
- Better support for M Series (no containers needed)
- Improved F-series support (proper monitor mode now available)

New Run Show Mode Functionality

- Added Input Priority Status page showing the active input
- Added AES Status (sync) page
- Added real-time Impedance readings to Load page
- The ribbon UI is now interactive and some icons will change colors to indicate status

Line Array Calculator updates

- Support for LAC Version 1.3
- Improved import support array circuiting now follows LAC

Error reporting tool

- New build-in error reporting functionality
- Sends anonymous usage and error data back to the development team
- Users must opt-in

New Speaker Preset updates

- New R3 V20/S25 presets with improved S25 protection
- New R1.1 M Series presets with improved Bi-Amp performance
- All speakers now get high-pass option

New Speaker Support

• Preset support for CSX/VTX F35

Performance Improvements

- Going in and out of Set Speaker Presets mode is now faster
- Performance and Memory use optimizations
- Improved compatibility with Windows DPI settings
- Added one more filter to Group EQ (total of 11)

Bug Fixes

- High CPU usage when meters were running
- Group EQ filters set to 1kHz getting lost

- BW to Q conversion issues fixed in Group EQ graphs
- Fixed opening file issue caused by Windows Localization settings
- Fixed circuit level issue when combining 4-channel and 2-channel amplifiers in the same circuit

Bug Fixes

JBL

- Localization issues preventing reading venue files
- Access violations to PresetDatabase.sdf when going online
- Generic speakers not properly working with ITech 4x3500HD

New Features

Performance Manager is now free of charge

• No need for a key or online activation

New User Interface with a modern look and feel

• Contemporary flat look with consistent color palette

New simplified modes / Ribbon reorganized

- Merged Calibrate Array and Tune System modes
- Merged Add Amplifiers, Amplify Manually and Add Processors modes

Full support for Pen input on Windows 10 devices

• All Performance Manager UI elements can now be operated via Pen input on Windows devices that support pen

Infinite Venue Canvas

- · Racks and arrays can be moved in any direction as far as you want
- The zoom tool will track updates
- The navigator button and window have been removed

New drag and drop feature for Speaker Presets

- In the new and simplified Add Amps and DSP mode, speaker and amplifier channels can now be associated even if they are initially generated with mismatched types/labels
- Drag and drop any speaker to any amplifier channel to create a connection

Greatly Simplified LAC Integration

- LAC is now a single step operation
- The single step import function now includes all circuiting and DSP information
- LAC within PM is now high DPi aware and works better on high resolution displays

EQ Improvements

- Group EQ: Individual filters or groups of EQ filters can now be transferred from one array to another using the new EQ copy-paste feature
- Calibrate Arrays: Individual filters or groups of EQ filters can now be transferred from one array to another using the new EQ copy-paste feature
- EQ adjustment handles are present only on selected/active EQsNew anti-slip function to prevent EQ filters from moving on accidental touch

Networking improvements



- Device discovery immediately starts when the software starts this will expedite the matching operation
- Networking options updated PM now allows for selecting the specific Network adapter used for the system

Simplified Circuiting

- The unpredictable high performance/nominal/economy circuiting specifications are gone
- Now simply specify the number of cabinets in a circuit
- New "3-way + Sub Parallel" wiring mode for VRack 4x3500

Array volume control

- New master array level control allows for adjusting the level of an entire array and can take values from -100 to +20dB
- Crown I-Tech HD firmware update is required for this feature to work

New delay scheme for Subwoofer Arrays

- New delay grouping for improved Electronic Delay Steering for Subwoofers arrays
- Two independent delay adjustments are now possible one for circuit-level EDS and one for the entire array
- New master/EDS delay ON/OFF switches for easy control

System Meter Improvements

- Integrated gain reduction the meters in Run Show mode now show both Output and Limiter Gain Reduction at the same time
- Optimizations Meters now run in a separate thread improving performance

New and improved system Grouping

• The system grouping tree has been reworked to better group arrays based on the selected system template

New venue Layout tools

- New object alignment options in design mode
- Object location can now be adjusted in all design modes

Default rack selection

- In the options you can specify what amplifier rack Performance Manager show use as the default option
- Users can now set custom racks (non V-Racks) as the default rack

New Keyboard Shortcuts

- Ctrl + O zoom to home
- Ctrl + +/- zoom in out
- Spacebar zoom to selected
- Shift-mouse drag constrained drag
- Tab next mode
- Shift-Tab previous mode



- F2 rename (where applicable)
- Ctrl + up/down/left/right arrow align edges
- Ctrl + A select all
- Ctrl + S Save
- Ctrl + Shift + S save as
- Ctrl + O open

New Speaker Support

• Full support for JBL VTX M Series

New Device Firmware

- New Crown Audio I-Tech 1200HD firmware (ITHD-1143.bnd)
- New Crown Audio I-Tech 4x3500HD firmware (ITHD4-10515.bnd)

Removed Items

- PM-2.0 is NOT backwards compatible with previous versions
- Removed bandpass gains
- Removed Limiter Adjustment
- Removed original Crown I-Tech and MAi amplifiers
- Removed STX series speakers
- · Removed various versions of array and stack templates in favor of simplified parameterized versions